
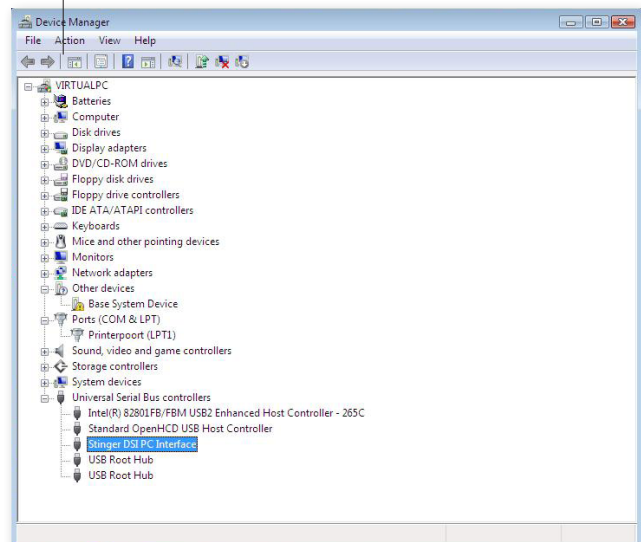


STINGER DESKTOP 2

Driver Installation for Windows Vista and Windows 7

Your computer uses so called 'drivers' to communicate with peripheral devices. Unfortunately, it is possible on Windows PC's that after it has been installed, the driver for the Stinger PC-Interface will not be automatically updated. This can happen if the older driver is manually updated. In order to always be able to update the driver, please follow the steps below:

1. First download the most recent version of the Stinger Desktop from **www.stinger.com** and install it on your PC.
2. Plug your PC-Interface into a USB port of your PC.
3. Select the *Start menu* in the bottom left corner of your screen and go to the *Control Panel*.
4. Click on *Device Manager* (Classic view should be turned on).
5. Click on the + in front of 'USB Controllers' (or 'Universal Serial Bus controllers') and rightclick on 'Stinger DSI PC Interface'. In the menu that appears click on 'Uninstall'.
6. In the 'Confirm Device Uninstall' window that appears, check the 'Delete the driver software for this device' and click 'OK'.
7. Now disconnect the PC Interface from your computer, wait for circa 5 seconds, and connect it again. The drivers should now install automatically and the PC-Interface becomes ready for use.

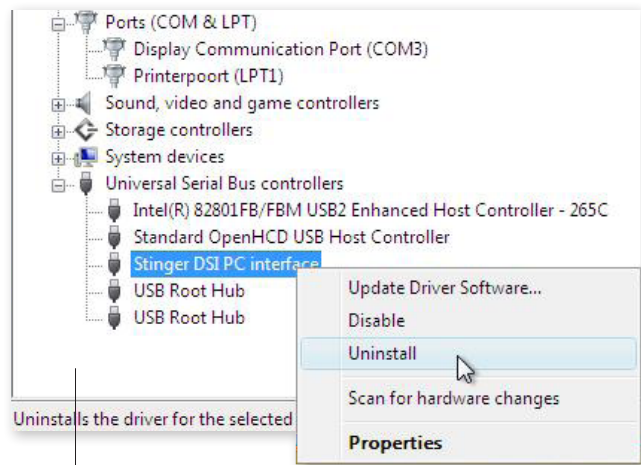

If you have any questions after reading this manual, please contact your local Stinger Distributor or contact Stinger Tech Support at telephone number: +31 (0)252 - 41 80 95.